


For short implant placement, implant major diameter needs to be \leq the bur (average diameter) at the 8mm laser mark. Please refer to page 16 in the Instructions for Use Manual.

In Ridge Expansion cases, please oversize your osteotomy and make sure that the crest diameter is equal to or larger than the implant major diameter.

In Hard Bone (Mandible), after Finishing the Full Osteotomy Preparation, Use the Next Larger Size Densah Bur to the 3mm Laser-Mark Depth to make sure the Osteotomy Crestal Diameter is Equal to or Larger than the Implant Major (Crestal) Diameter.

Use Densah Burs in full-step increments for Sinus Lift cases. Example: 2.0mm, 3.0mm, 4.0mm, 5.0mm

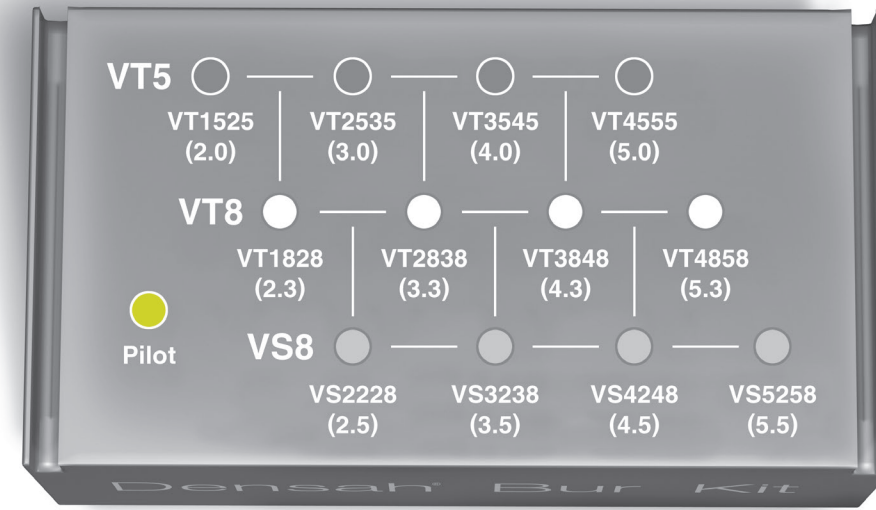

Use large block display to compare Bur identification system when using the schematic below for proper Bur usage

● VT5 Set ○ VT8 Set ● VS8 Set

Densifying Mode CCW (800-1500) RPMs / Cutting Mode CW (800-1500) RPMs																			
Blue Sky Bio®			One Stage																
			Soft Bone							Hard Bone (Mandible)									
			In densifying mode make sure your osteotomy is 1.0 mm deeper than the actual implant final length. In extreme hard bone, utilize DAC (Densify After Cut) Protocol. Find protocol in IFU.																
Geometry	Major Ø	Minor Ø	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Bur 5	Densah® Bur Block Display	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Bur 5	Bur 6	Bur 7	Bur 8	Densah® Bur Block Display
Straight	3.3/4.1		Pilot	VT1828 (2.3)	VS2228* (2.5)	—	—	—		Pilot	VT1828 (2.3)	VS2228 (2.5)	VT2535** (3.0)	—	—	—	—	—	
Straight	3.3/4.8		Pilot	VT1828 (2.3)	VS2228 (2.5)	VT2838** (3.3)	—	—		Pilot	VT1828 (2.3)	VS2228 (2.5)	VT3545** (4.0)	—	—	—	—	—	
Taper	4.1		Pilot	VT1828 (2.3)	VT2838* (3.3)	—	—	—		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VS3238* (3.5)	—	—	—	—	
Taper	4.1/4.8		Pilot	VT1828 (2.3)	VT2838 (3.3)	VS3238* (3.5)	—	—		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VS3238 (3.5)	VT3545** (4.0)	—	—	—	
Taper	4.8		Pilot	VT1525 (2.0)	VT2535 (3.0)	VT3545* (4.0)	—	—		Pilot	VT1525 (2.0)	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VT3545 (4.0)	VT3848** (4.3)	—	—	
Taper	4.8/6.5		Pilot	VT1525 (2.0)	VT2535 (3.0)	VT3545 (4.0)	VT4555 (5.0)	VT4858** (5.3)		Pilot	VT1525 (2.0)	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VT3545 (4.0)	VT3848 (4.3)	VT4555 (5.0)	VT4858** (5.3)	

*Denotes implant placement

(**) Only take the Densah Bur to the (5mm laser mark) depth to slightly open up the crestal diameter to avoid any possible excessive crestal bone strain during implant placement.


Clinician judgement and experience should be applied in conjunction with this suggestive Implant Drilling System

For short implant placement, implant major diameter needs to be \leq the bur (average diameter) at the 8mm laser mark. Please refer to page 16 in the Instructions for Use Manual.

In Ridge Expansion cases, please oversize your osteotomy and make sure that the crest diameter is equal to or larger than the implant major diameter.

In Hard Bone (Mandible), after Finishing the Full Osteotomy Preparation, Use the Next Larger Size Densah Bur to the 3mm Laser-Mark Depth to make sure the Osteotomy Crestal Diameter is Equal to or Larger than the Implant Major (Crestal) Diameter.

Use Densah Burs in full-step increments for Sinus Lift cases. Example: 2.0mm, 3.0mm, 4.0mm, 5.0mm

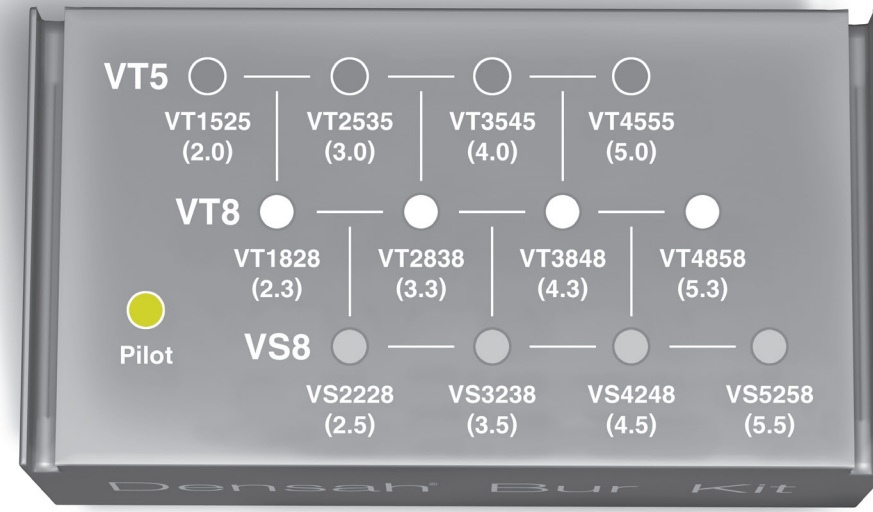

Use large block display to compare Bur identification system when using the schematic below for proper Bur usage

● VT5 Set ○ VT8 Set ● VS8 Set

Densifying Mode CCW (800-1500) RPMs / Cutting Mode CW (800-1500) RPMs																	
Blue Sky Bio®			Internal Hex														
			Soft Bone						Hard Bone (Mandible)								
			In densifying mode make sure your osteotomy is 1.0 mm deeper than the actual implant final length. In extreme hard bone, utilize DAC (Densify After Cut) Protocol. Find protocol in IFU.														
Geometry	Major Ø	Minor Ø	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Densah® Bur Block Display	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Bur 5	Bur 6	Bur 7	Densah® Bur Block Display
Taper	3.7		Pilot	VT1525 (2.0)	VT2535* (3.0)	—	—		Pilot	VT1525 (2.0)	VT1828 (2.3)	VT2535* (3.0)	—	—	—	—	
Taper	4.1		Pilot	VT1828 (2.3)	VT2838* (3.3)	—	—		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VS3238* (3.5)	—	—	—	
Taper	4.7		Pilot	VT1525 (2.0)	VT2535 (3.0)	VT3545* (4.0)	—		Pilot	VT1525 (2.0)	VT2535 (3.0)	VT2838 (3.3)	VT3545 (4.0)	VT3848** (4.3)	—	—	

*Denotes implant placement.

(**) Only take the Densah Bur to the (5mm laser mark) depth to slightly open up the crestal diameter to avoid any possible excessive crestal bone strain during implant placement.

10534 REV01

Clinician judgement and experience should be applied in conjunction with this suggestive Implant Drilling System

For short implant placement, implant major diameter needs to be \leq the bur (average diameter) at the 8mm laser mark. Please refer to page 16 in the Instructions for Use Manual.

In Ridge Expansion cases, please oversize your osteotomy and make sure that the crest diameter is equal to or larger than the implant major diameter.

In Hard Bone (Mandible), after Finishing the Full Osteotomy Preparation, Use the Next Larger Size Densah Bur to the 3mm Laser-Mark Depth to make sure the Osteotomy Crestal Diameter is Equal to or Larger than the Implant Major (Crestal) Diameter.

Use Densah Burs in full-step increments for Sinus Lift cases. Example: 2.0mm, 3.0mm, 4.0mm, 5.0mm



Use large block display to compare Bur identification system when using the schematic below for proper Bur usage

● VT5 Set ○ VT8 Set ● VS8 Set

Densifying Mode CCW (800-1500) RPMs / Cutting Mode CW (800-1500) RPMs																	
Blue Sky Bio®			Quattro														
			Soft Bone					Hard Bone (Mandible)									
			In densifying mode make sure your osteotomy is 1.0 mm deeper than the actual implant final length. In extreme hard bone, utilize DAC (Densify After Cut) Protocol. Find protocol in IFU.														
Geometry	Major Ø	Minor Ø	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Densah® Bur Block Display	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Bur 5	Bur 6	Bur 7	Densah® Bur Block Display
Straight	3.3		Pilot	VT1828 (2.3)	VS2228* (2.5)	—	—		Pilot	VT1828 (2.3)	VS2228 (2.5)	VT2535** (3.0)	—	—	—	—	
Straight	4.1		Pilot	VT1828 (2.3)	VT2838 (3.3)	VS3238* (3.5)	—		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VS3238 (3.5)	VT3545** (4.0)	—	—	
Taper	4.8		Pilot	VT1828 (2.3)	VT2838 (3.3)	VT3848* (4.3)	—		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VT3545 (4.0)	VT3848 (4.3)	VS4248* (4.5)	—	

*Denotes implant placement.

(**) Only take the Densah Bur to the (5mm laser mark) depth to slightly open up the crestal diameter to avoid any possible excessive crestal bone strain during implant placement.


Clinician judgement and experience should be applied in conjunction with this suggestive Implant Drilling System

For short implant placement, implant major diameter needs to be \leq the bur (average diameter) at the 8mm laser mark. Please refer to page 16 in the Instructions for Use Manual.

In Ridge Expansion cases, please oversize your osteotomy and make sure that the crest diameter is equal to or larger than the implant major diameter.

In Hard Bone (Mandible), after Finishing the Full Osteotomy Preparation, Use the Next Larger Size Densah Bur to the 3mm Laser-Mark Depth to make sure the Osteotomy Crestal Diameter is Equal to or Larger than the Implant Major (Crestal) Diameter.

Use Densah Burs in full-step increments for Sinus Lift cases. Example: 2.0mm, 3.0mm, 4.0mm, 5.0mm

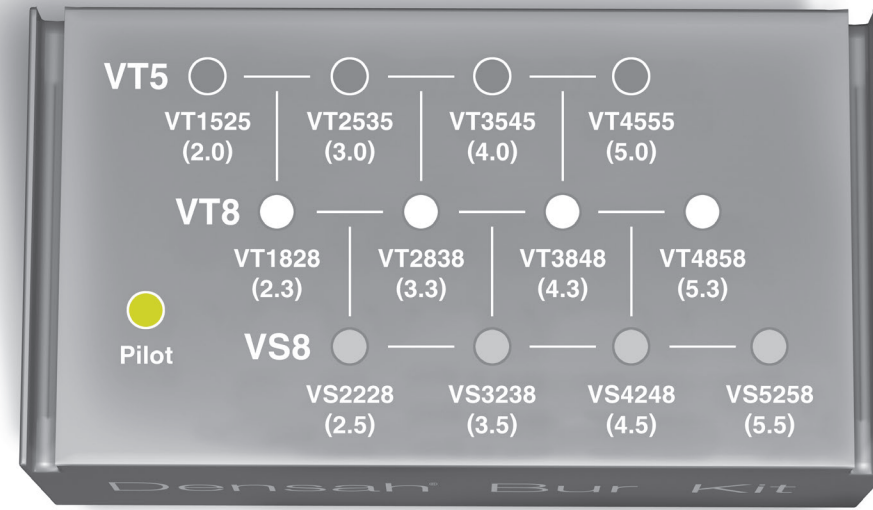

Use large block display to compare Bur identification system when using the schematic below for proper Bur usage

● VT5 Set ○ VT8 Set ● VS8 Set

Densifying Mode CCW (800-1500) RPMs / Cutting Mode CW (800-1500) RPMs

Blue Sky Bio®			Bio/Trilobe															
			Soft Bone					Hard Bone (Mandible)										
			In densifying mode make sure your osteotomy is 1.0 mm deeper than the actual implant final length. In extreme hard bone, utilize DAC (Densify After Cut) Protocol. Find protocol in IFU.															
Geometry	Major Ø	Minor Ø	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Densah® Bur Block Display	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Bur 5	Bur 6	Bur 7	Bur 8	Densah® Bur Block Display
Taper	3.5		Pilot	VT1525 (2.0)	VS2228 (2.5)	VT2535** (3.0)	—		Pilot	VT1525 (2.0)	VT1828 (2.3)	VT2535* (3.0)	—	—	—	—	—	
Taper	4.3		Pilot	VT1828 (2.3)	VT2838* (3.3)	—	—		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VS3238* (3.5)	—	—	—	—	
Taper	5.0		Pilot	VT1828 (2.3)	VT2838 (3.3)	VT3848* (4.3)	—		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VT3545 (4.0)	VT3848* (4.3)	VS4248* (4.5)	—	—	
Taper	6.0		Pilot	VT1828 (2.3)	VT2838 (3.3)	VT3848 (4.3)	VT4858* (5.3)		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VT3545 (4.0)	VT3848 (4.3)	VT4555 (5.0)	VT4858 (5.3)	VS5258* (5.5)	

*Denotes implant placement.

(**) Only take the Densah Bur to the (5mm laser mark) depth to slightly open up the crestal diameter to avoid any possible excessive crestal bone strain during implant placement.


Clinician judgement and experience should be applied in conjunction with this suggestive Implant Drilling System

For short implant placement, implant major diameter needs to be \leq the bur (average diameter) at the 8mm laser mark. Please refer to page 16 in the Instructions for Use Manual.

In Ridge Expansion cases, please oversize your osteotomy and make sure that the crest diameter is equal to or larger than the implant major diameter.

In Hard Bone (Mandible), after Finishing the Full Osteotomy Preparation, Use the Next Larger Size Densah Bur to the 3mm Laser-Mark Depth to make sure the Osteotomy Crestal Diameter is Equal to or Larger than the Implant Major (Crestal) Diameter.

Use Densah Burs in full-step increments for Sinus Lift cases. Example: 2.0mm, 3.0mm, 4.0mm, 5.0mm

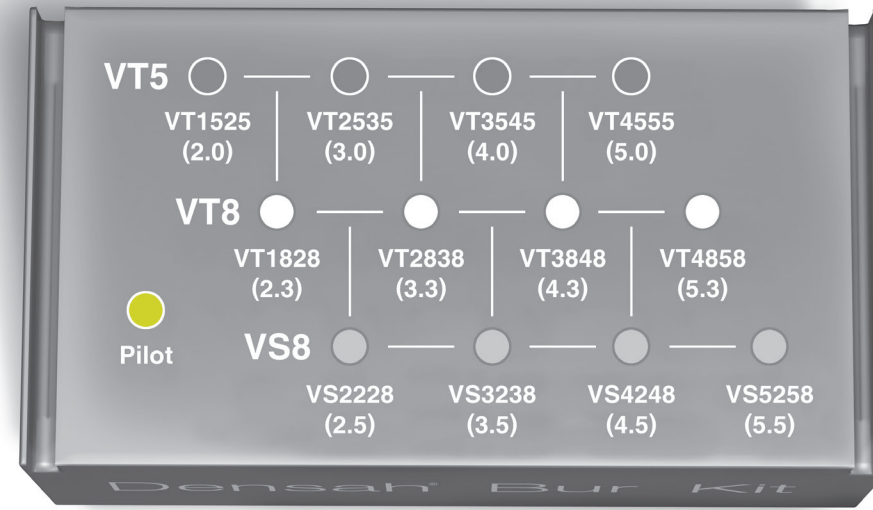

Use large block display to compare Bur identification system when using the schematic below for proper Bur usage

● VT5 Set ○ VT8 Set ● VS8 Set

Densifying Mode CCW (800-1500) RPMs / Cutting Mode CW (800-1500) RPMs

Blue Sky Bio®			BIO/Max														
			Soft Bone						Hard Bone (Mandible)								
			In densifying mode make sure your osteotomy is 1.0 mm deeper than the actual implant final length. In extreme hard bone, utilize DAC (Densify After Cut) Protocol. Find protocol in IFU.														
Geometry	Major Ø	Minor Ø	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Densah® Bur Block Display	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Bur 5	Bur 6	Bur 7	Densah® Bur Block Display
Taper	3.5		Pilot	VT1525 (2.0)	VS2228* (2.5)	—	—		Pilot	VT1525 (2.0)	VT1828 (2.3)	VT2535* (3.0)	—	—	—	—	
Taper	4.3		Pilot	VT1828 (2.3)	VT2838* (3.3)	—	—		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VS3238* (3.5)	—	—	—	
Taper	4.3 Short		Pilot	VT1828 (2.3)	VT2838 (3.3)	VT3545** (4.0)	—		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VT3545* (4.0)	—	—	—	
Taper	5.0		Pilot	VT1828 (2.3)	VT2838 (3.3)	VT3848* (4.3)	—		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VT3545 (4.0)	VT3848 (4.3)	VS4248* (4.5)	—	
Taper	5.0 Short		Pilot	VT1828 (2.3)	VT2838 (3.3)	VT3848 (4.3)	VS4248* (4.5)		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VT3545 (4.0)	VT3848 (4.3)	VS4248* (4.5)	—	

*Denotes implant placement.

(**) Only take the Densah Bur to the (5mm laser mark) depth to slightly open up the crestal diameter to avoid any possible excessive crestal bone strain during implant placement.


*Clinician judgement and experience should be applied in conjunction with this suggestive Implant Drilling System

For short implant placement, implant major diameter needs to be \leq the bur (average diameter) at the 8mm laser mark. Please refer to page 16 in the Instructions for Use Manual.

In Ridge Expansion cases, please oversize your osteotomy and make sure that the crest diameter is equal to or larger than the implant major diameter.

In Hard Bone (Mandible), after Finishing the Full Osteotomy Preparation, Use the Next Larger Size Densah Bur to the 3mm Laser-Mark Depth to make sure the Osteotomy Crestal Diameter is Equal to or Larger than the Implant Major (Crestal) Diameter.

Use Densah Burs in full-step increments for Sinus Lift cases. Example: 2.0mm, 3.0mm, 4.0mm, 5.0mm

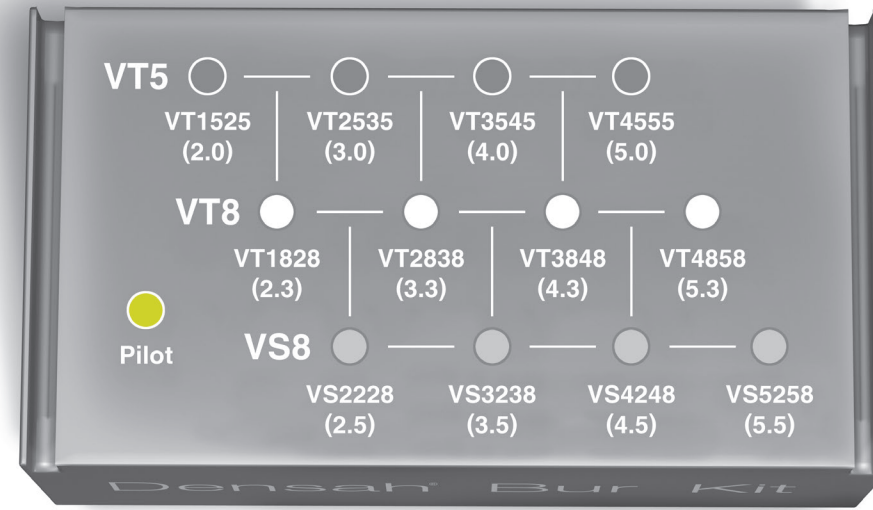

Use large block display to compare Bur identification system when using the schematic below for proper Bur usage

● VT5 Set ○ VT8 Set ● VS8 Set

Densifying Mode CCW (800-1500) RPMs / Cutting Mode CW (800-1500) RPMs

Blue Sky Bio®			Bio/Consus 12														
			Soft Bone						Hard Bone (Mandible)								
			In densifying mode make sure your osteotomy is 1.0 mm deeper than the actual implant final length. In extreme hard bone, utilize DAC (Densify After Cut) Protocol. Find protocol in IFU.														
Geometry	Major Ø	Minor Ø	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Densah® Bur Block Display	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Bur 5	Bur 6	Bur 7	Densah® Bur Block Display
Taper	3.0		Pilot	VT1828 (2.3)	VS2228* (2.5)	—	—		Pilot	VT1828 (2.3)	VS2228* (2.5)	—	—	—	—	—	
Taper	3.5		Pilot	VT1525 (2.0)	VT2535* (3.0)	—	—		Pilot	VT1525 (2.0)	VT1828 (2.3)	VT2535* (3.0)	—	—	—	—	
Taper	4.0		Pilot	VT1828 (2.3)	VT2838* (3.3)	—	—		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VS3238* (3.5)	—	—	—	
Taper	4.5		Pilot	VT1525 (2.0)	VT2535 (3.0)	VS3238* (3.5)	—		Pilot	VT1525 (2.0)	VT2535 (3.0)	VT2838 (3.3)	VT3545* (4.0)	—	—	—	
Taper	5.0		Pilot	VT1828 (2.3)	VT2838 (3.3)	VT3848* (4.3)	—		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VT3545 (4.0)	VT3848 (4.3)	VS4248* (4.5)	—	

*Denotes implant placement.

Clinician judgement and experience should be applied in conjunction with this suggestive Implant Drilling System