


For short implant placement, implant major diameter needs to be \leq the bur (average diameter) at the 8mm laser mark.

In Ridge Expansion cases, please oversize your osteotomy and make sure that the crest diameter is equal to or larger than the implant major diameter.

In Hard Bone (Mandible), after Finishing the Full Osteotomy Preparation, Use the Next Larger Size Densah Bur to the 3mm Laser-Mark Depth to make sure the Osteotomy Crestal Diameter is Equal to or Larger than the Implant Major (Crestal) Diameter.

Use Densah Burs in full-step increments for Sinus Lift cases.

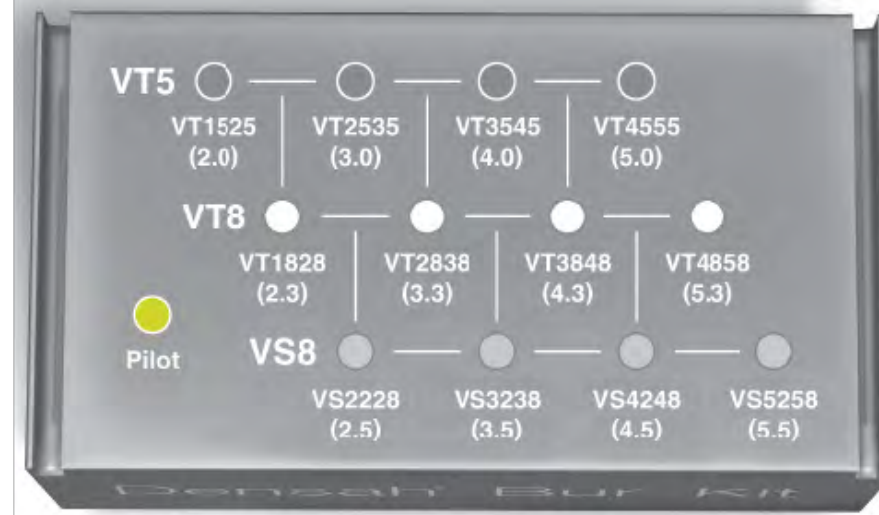

Use large block display to compare Bur identification system when using the schematic below for proper

● VT5 Set ○ VT8 Set ● VS8 Set

Densifying Mode CCW (1000) RPMs / Cutting Mode CW (1000) RPMs																		
Southern Implant			Inverta™ Deep Conical															
			Soft Bone						Hard Bone (Mandible)									
									In densifying mode make sure your osteotomy is 1.0 mm deeper than the actual implant final length. extreme hard bone, utilize DAC (Densify After Cut) Protocol. Find protocol in IFU.									
	Major Ø	Minor Ø	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Densah® Bur Block Display	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Bur 5	Bur 6	Bur 7	Bur 8	Densah® Bur Block Display
Taper	4.5	3.5	Pilot	VT1525 (2.0)	VT2535 (3.0)	VT3545* (4.0)	—		Pilot	VT1525 (2.0)	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VT3545* (4.0)	—	—	—	
Taper	5.0	4.0	Pilot	VT1828 (2.3)	VT2838 (3.3)	VT3848* (4.3)	—		Pilot	VT1525 (2.0)	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VT3545 (4.0)	VT3848* (4.3)	—	—	
Taper	6.0	5.0	Pilot	VT1828 (2.3)	VT2838 (3.3)	VT3848 (4.3)	VT4858* (5.3)		Pilot	VT1525 (2.0)	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VT3545 (4.0)	VT3848 (4.3)	VT4555 (5.0)	VT4858* (5.3)	

*Denotes implant placement.

* Clinician judgement and experience should be applied in conjunction with this suggestive Implant Drilling System


* Clinician must follow their implant systems recommended insertion torque guidelines.

For short implant placement, implant major diameter needs to be \leq the bur (average diameter) at the 8mm laser mark.

In Ridge Expansion cases, please oversize your osteotomy and make sure that the crest diameter is equal to or larger than the implant major diameter.

In Hard Bone (Mandible), after Finishing the Full Osteotomy Preparation, Use the Next Larger Size Densah Bur to the 3mm Laser-Mark Depth to make sure the Osteotomy Crestal Diameter is Equal to or Larger than the Implant Major (Crestal) Diameter.

Use Densah Burs in full-step increments for Sinus Lift cases.

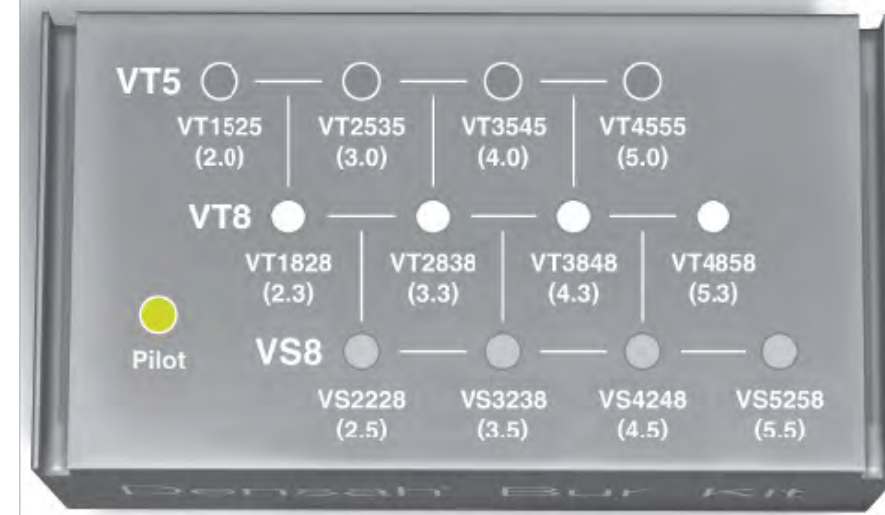

Use large block display to compare Bur identification system when using the schematic below for proper

● VT5 Set ○ VT8 Set ● VS8 Set

Densifying Mode CCW (1000) RPMs / Cutting Mode CW (1000) RPMs

Southern Implant

Inverta™ External Hex

Soft Bone

Hard Bone (Mandible)

In densifying mode make sure your osteotomy is 1.0 mm deeper than the actual implant final length. extreme hard bone, utilize DAC (Densify After Cut) Protocol. Find protocol in IFU.

	Major Ø	Minor Ø	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Densah® Bur Block Display	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Bur 5	Bur 6	Bur 7	Bur 8	Densah® Bur Block Display
Taper	3.5	3.0	Pilot	VT1525 (2.0)	VT2535* (3.0)	—	—		Pilot	VT1525 (2.0)	VT1828 (2.3)	VT2535* (3.0)	—	—	—	—	—	
Taper	4.5	3.5	Pilot	VT1525 (2.0)	VT2535 (3.0)	VT3545* (4.0)	—		Pilot	VT1525 (2.0)	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VT3545* (4.0)	—	—	—	
Taper	5.0	4.0	Pilot	VT1828 (2.3)	VT2838 (3.3)	VT3848* (4.3)	—		Pilot	VT1525 (2.0)	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VT3545 (4.0)	VT3848* (4.3)	—	—	
Taper	6.0	5.2	Pilot	VT1828 (2.3)	VT2838 (3.3)	VT3848 (4.3)	VT4858* (5.3)		Pilot	VT1525 (2.0)	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VT3545 (4.0)	VT3848 (4.3)	VT4555 (5.0)	VT4858* (5.3)	

*Denotes implant placement.

* Clinician judgement and experience should be applied in conjunction with this suggestive Implant Drilling System


* Clinician must follow their implant systems recommended insertion torque guidelines.

For short implant placement, implant major diameter needs to be \leq the bur (average diameter) at the 8mm laser mark.

In Ridge Expansion cases, please oversize your osteotomy and make sure that the crest diameter is equal to or larger than the implant major diameter.

In Hard Bone (Mandible), after Finishing the Full Osteotomy Preparation, Use the Next Larger Size Densah Bur to the 3mm Laser-Mark Depth to make sure the Osteotomy Crestal Diameter is Equal to or Larger than the Implant Major (Crestal) Diameter.

Use Densah Burs in full-step increments for Sinus Lift cases. Example: 2.0mm, 3.0mm, 4.0mm, 5.0mm

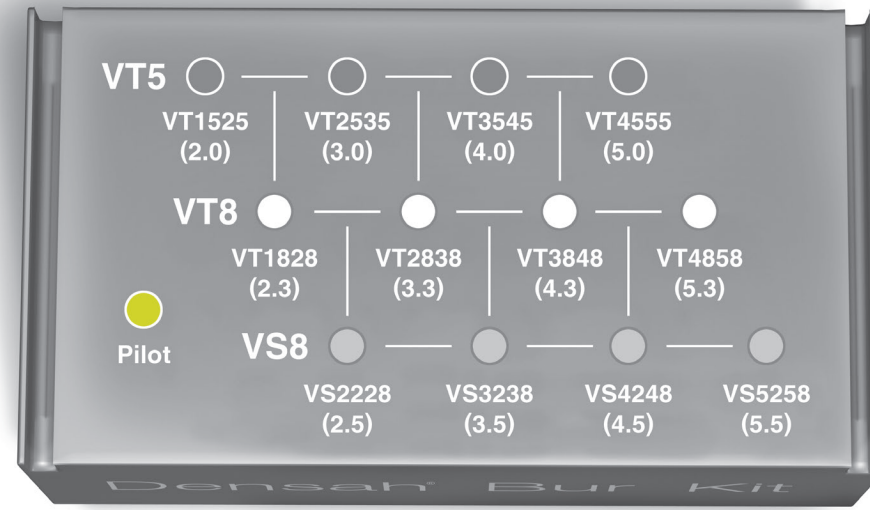

Use large block display to compare Bur identification system when using the schematic below for proper

● VT5 Set ○ VT8 Set ● VS8 Set

Densifying Mode CCW (1000) RPMs / Cutting Mode CW (1000) RPMs																	
Southern Implant			Internal Octagon Implants														
			Soft Bone					Hard Bone (Mandible)									
			In densifying mode make sure your osteotomy is 1.0 mm deeper than the actual implant final length. extreme hard bone, utilize DAC (Densify After Cut) Protocol. Find protocol in IFU.														
Geometry	Major Ø	Minor Ø	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Densah® Bur Block Display	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Bur 5	Bur 6	Bur 7	Densah® Bur Block Display
Straight	3.3	3.3	Pilot	VT1828 (2.3)	VS2228* (2.5)	—	—		Pilot	VT1828 (2.3)	VS2228* (2.5)	—	—	—	—	—	
Straight	4.1	4.1	Pilot	VT1525 (2.0)	VT2535* (3.0)	—	—		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VS3238* (3.5)	—	—	—	
Straight	4.9	4.9	Pilot	VT1525 (2.0)	VT2535 (3.0)	VT3545* (4.0)	—		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VT3545 (4.0)	VT3848* (4.3)	—	—	
Wide Restorative Diameter	5.0	5.0	Pilot	VT1828 (2.0)	VT2838 (3.0)	VT3848* (4.0)	—		Pilot	VT1525 (2.0)	VT2535 (3.0)	VT2838 (3.3)	VT3545 (4.0)	VT3848 (4.3)	VT4555 (5.0)	VT4858* (5.3)	

*Denotes implant placement.

* Clinician judgement and experience should be applied in conjunction with this suggestive Implant Drilling System


* Clinician must follow their implant systems recommended insertion torque guidelines.

For short implant placement, implant major diameter needs to be \leq the bur (average diameter) at the 8mm laser mark.

In Ridge Expansion cases, please oversize your osteotomy and make sure that the crest diameter is equal to or larger than the implant major diameter.

In Hard Bone (Mandible), after Finishing the Full Osteotomy Preparation, Use the Next Larger Size Densah Bur to the 3mm Laser-Mark Depth to make sure the Osteotomy Crestal Diameter is Equal to or Larger than the Implant Major (Crestal) Diameter.

Use Densah Burs in full-step increments for Sinus Lift cases.
Example: 2.0mm, 3.0mm, 4.0mm, 5.0mm

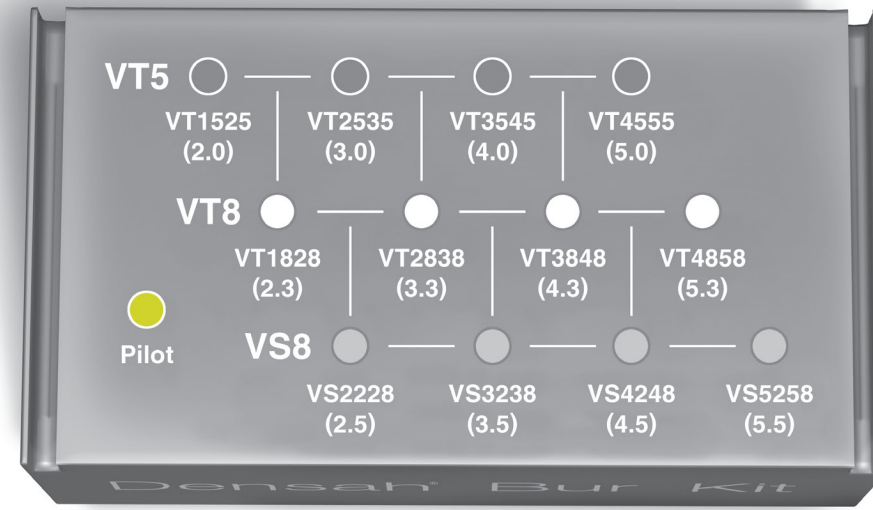

Use large block display to compare Bur identification system when using the schematic below for proper

● VT5 Set ○ VT8 Set ● VS8 Set

Densifying Mode CCW (1000) RPMs / Cutting Mode CW (1000) RPMs																	
Southern Implant			Deep Conical Connection - (Co-Axis) Tapered														
			Soft Bone					Hard Bone (Mandible)									
			In densifying mode make sure your osteotomy is 1.0 mm deeper than the actual implant final length. extreme hard bone, utilize DAC (Densify After Cut) Protocol. Find protocol in IFU.														
Geometry	Major Ø	Minor Ø	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Densah® Bur Block Display	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Bur 5	Bur 6	Bur 7	Densah® Bur Block Display
Taper	3.0	2.1	Pilot	VT1828* (2.3)	—	—	—		Pilot	VT1828 (2.3)	VS2228* (2.5)	—	—	—	—	—	
Taper	3.5	2.4	Pilot	VT1525 (2.0)	VT1828* (2.3)	—	—		Pilot	VT1828 (2.3)	VS2228* (2.5)	—	—	—	—	—	
Taper	4.0	3.6	Pilot	VT1828 (2.3)	VT2838* (3.3)	—	—		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VS3238* (3.5)	—	—	—	
Taper	5.0	4.1	Pilot	VT1828 (2.3)	VT2838 (3.3)	VT3848* (4.3)	—		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VT3545 (4.0)	VT3848 (4.3)	VS4248* (4.5)	—	

*Denotes implant placement.

* Clinician judgement and experience should be applied in conjunction with this suggestive Implant Drilling System


* Clinician must follow their implant systems recommended insertion torque guidelines.

For short implant placement, implant major diameter needs to be ≤ the bur (average diameter) at the 8mm laser mark.

In Ridge Expansion cases, please oversize your osteotomy and make sure that the crest diameter is equal to or larger than the implant major diameter.

In Hard Bone (Mandible), after Finishing the Full Osteotomy Preparation, Use the Next Larger Size Densah Bur to the 3mm Laser-Mark Depth to make sure the Osteotomy Crestal Diameter is Equal to or Larger than the Implant Major (Crestal) Diameter.

Use Densah Burs in full-step increments for Sinus Lift cases. Example: 2.0mm, 3.0mm, 4.0mm, 5.0mm

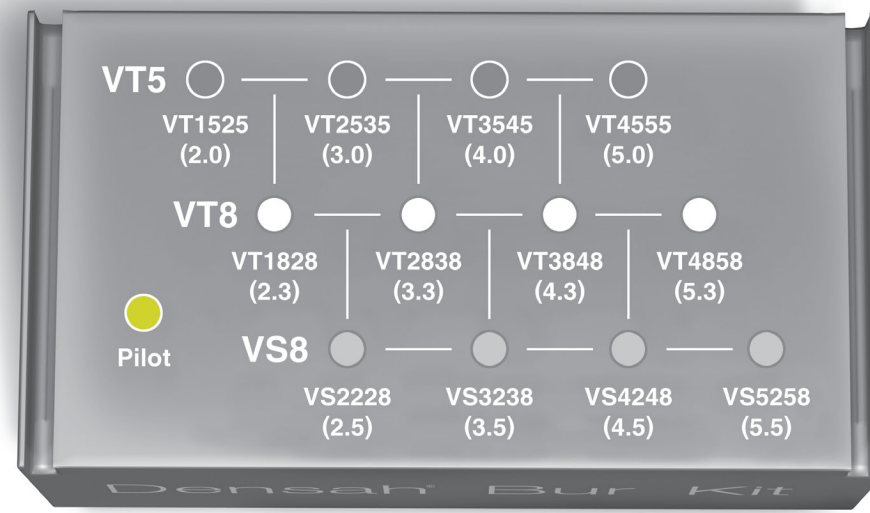

Use large block display to compare Bur identification system when using the schematic below for proper

● VT5 Set ○ VT8 Set ● VS8 Set

Densifying Mode CCW (1000) RPMs / Cutting Mode CW (1000) RPMs

Southern Implant		External Hex Tapered - TriNex Tapered - IT connection Tapered & (Co-Axis)s															
		Soft Bone							Hard Bone (Mandible)								
		In densifying mode make sure your osteotomy is 1.0 mm deeper than the actual implant final length. extreme hard bone, utilize DAC (Densify After Cut) Protocol. Find protocol in IFU.															
Geometry	Major Ø	Minor Ø	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Densah® Bur Block Display	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Bur 5	Bur 6	Bur 7	Densah® Bur Block Display
Taper	3.2	2.5	Pilot	VT1828 (2.3)	VS2228* (2.5)	—	—		Pilot	VT1828 (2.3)	VS2228* (2.5)	—	—	—	—	—	
Taper	3.5	3.0	Pilot	VT1525 (2.0)	VS2228* (2.5)	—	—		Pilot	VT1525 (2.0)	VT1828 (2.3)	VT2535* (3.0)	—	—	—	—	
Taper	3.75	3.2	Pilot	VT1525 (2.0)	VT2535* (3.0)	—	—		Pilot	VT1525 (2.0)	VT2535 (3.0)	VT2838* (3.3)	—	—	—	—	
Taper	4.0	3.7	Pilot	VT1828 (2.3)	VT2838* (3.3)	—	—		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VS3238* (3.5)	—	—	—	
Taper	4.3	3.7	Pilot	VT1828 (2.3)	VT2838* (3.3)	—	—		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VS3238* (3.5)	—	—	—	
Taper	5.0	4.2	Pilot	VT1828 (2.3)	VT2838 (3.3)	VT3545* (4.0)	—		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VT3545 (4.0)	VT3848* (4.3)	—	—	
Taper	6.0	5.0	Pilot	VT1525 (2.0)	VT2535 (3.0)	VT3545 (4.0)	VT4555* (5.0)		Pilot	VT1525 (2.0)	VT2535 (3.0)	VT2838 (3.3)	VT3545 (4.0)	VT3848 (4.3)	VT4555 (5.0)	VT4858* (5.3)	

*Denotes implant placement.

* Clinician judgement and experience should be applied in conjunction with this suggestive Implant Drilling System


* Clinician must follow their implant systems recommended insertion torque guidelines.

For short implant placement, implant major diameter needs to be \leq the bur (average diameter) at the 8mm laser mark.

In Ridge Expansion cases, please oversize your osteotomy and make sure that the crest diameter is equal to or larger than the implant major diameter.

In Hard Bone (Mandible), after Finishing the Full Osteotomy Preparation, Use the Next Larger Size Densah Bur to the 3mm Laser-Mark Depth to make sure the Osteotomy Crestal Diameter is Equal to or Larger than the Implant Major (Crestal) Diameter.

Use Densah Burs in full-step increments for Sinus Lift cases.
Example: 2.0mm, 3.0mm, 4.0mm, 5.0mm

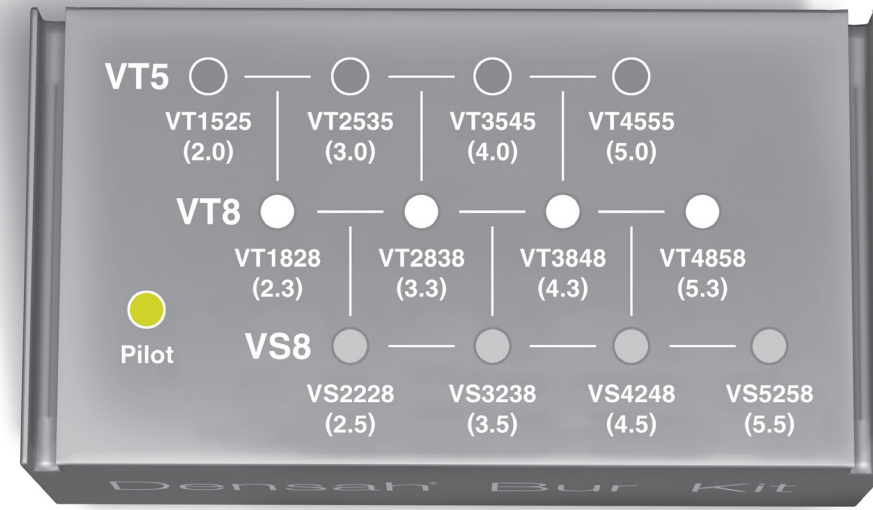

Use large block display to compare Bur identification system when using the schematic below for proper

● VT5 Set ○ VT8 Set ● VS8 Set

Densifying Mode CCW (1000) RPMs / Cutting Mode CW (1000) RPMs																	
Southern Implant			Internal Hex (M-Series) & (Co-Axis)														
			Soft Bone						Hard Bone (Mandible)								
			In densifying mode make sure your osteotomy is 1.0 mm deeper than the actual implant final length. extreme hard bone, utilize DAC (Densify After Cut) Protocol. Find protocol in IFU.														
Geometry	Major Ø	Minor Ø	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Densah® Bur Block Display	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Bur 5	Bur 6	Bur 7	Densah® Bur Block Display
Taper	3.50	3.00	Pilot	VT1525 (2.0)	VS2228* (3.0)	—	—		Pilot	VT1525 (2.0)	VS2228* (3.0)	—	—	—	—	—	
Taper	4.20	3.40	Pilot	VT1828 (2.3)	VT2838* (3.3)	—	—		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VS3238* (3.5)	—	—	—	
Taper	5.00	3.40	Pilot	VT1525 (2.0)	VT2535 (3.0)	VT3545* (4.0)	—		Pilot	VT1525 (2.0)	VT2535 (3.0)	VT2838 (3.3)	VT3545 (4.0)	VT3848* (4.3)	—	—	

*Denotes implant placement.

* Clinician judgement and experience should be applied in conjunction with this suggestive Implant Drilling System


* Clinician must follow their implant systems recommended insertion torque guidelines.

For short implant placement, implant major diameter needs to be \leq the bur (average diameter) at the 8mm laser mark.

In Ridge Expansion cases, please oversize your osteotomy and make sure that the crest diameter is equal to or larger than the implant major diameter.

In Hard Bone (Mandible), after Finishing the Full Osteotomy Preparation, Use the Next Larger Size Densah Bur to the 3mm Laser-Mark Depth to make sure the Osteotomy Crestal Diameter is Equal to or Larger than the Implant Major (Crestal) Diameter.

Use Densah Burs in full-step increments for Sinus Lift cases.
Example: 2.0mm, 3.0mm, 4.0mm, 5.0mm

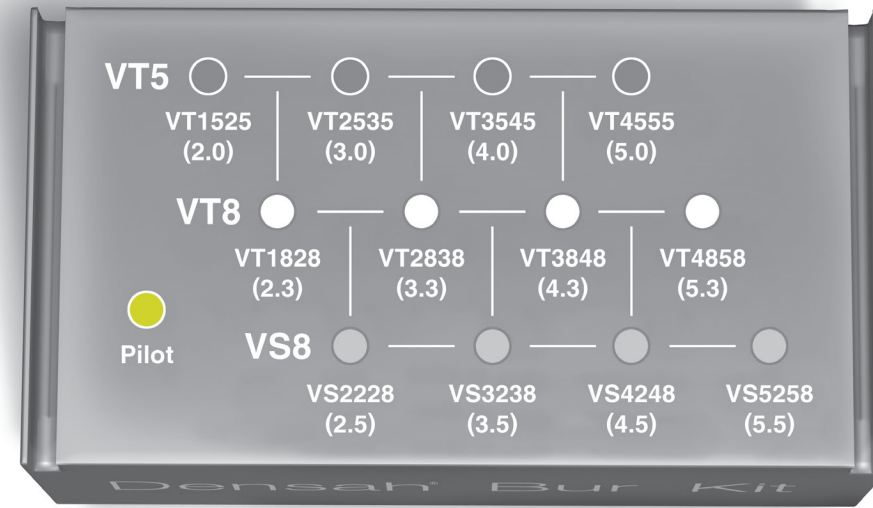

Use large block display to compare Bur identification system when using the schematic below for proper

● VT5 Set ○ VT8 Set VS8 Set

Densifying Mode CCW (1000) RPMs / Cutting Mode CW (1000) RPMs																	
Southern Implant			Deep Conical Connection - (Co-Axis) Straight														
			Soft Bone					Hard Bone (Mandible)									
								In densifying mode make sure your osteotomy is 1.0 mm deeper than the actual implant final length. extreme hard bone, utilize DAC (Densify After Cut) Protocol. Find protocol in IFU.									
Geometry	Major Ø	Minor Ø	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Densah® Bur Block Display	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Bur 5	Bur 6	Bur 7	Densah® Bur Block Display
Straight	3.0	3.0	Pilot	VT1828 (2.3)	VS2228* (2.5)	—	—		Pilot	VT1828 (2.3)	VS2228* (2.5)	—	—	—	—	—	
Straight	3.5	3.5	Pilot	VT1525 (2.0)	VT2535* (3.0)	—	—		Pilot	VT1525 (2.0)	VT1828 (2.3)	VT2535* (3.0)	—	—	—	—	
Straight	4.0	4.0	Pilot	VT1828 (2.3)	VT2838* (3.3)	—	—		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VS3238* (3.5)	—	—	—	
Straight	5.0	5.0	Pilot	VT1828 (2.3)	VT2838 (3.3)	VT3848* (4.3)	—		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VT3545 (4.0)	VT3848 (4.3)	VT4248* (4.5)	—	

*Denotes implant placement.

* Clinician judgement and experience should be applied in conjunction with this suggestive Implant Drilling System


* Clinician must follow their implant systems recommended insertion torque guidelines.

For short implant placement, implant major diameter needs to be ≤ the bur (average diameter) at the 8mm laser mark.

In Ridge Expansion cases, please oversize your osteotomy and make sure that the crest diameter is equal to or larger than the implant major diameter.

In Hard Bone (Mandible), after Finishing the Full Osteotomy Preparation, Use the Next Larger Size Densah Bur to the 3mm Laser-Mark Depth to make sure the Osteotomy Crestal Diameter is Equal to or Larger than the Implant Major (Crestal) Diameter.

Use Densah Burs in full-step increments for Sinus Lift cases. Example: 2.0mm, 3.0mm, 4.0mm, 5.0mm

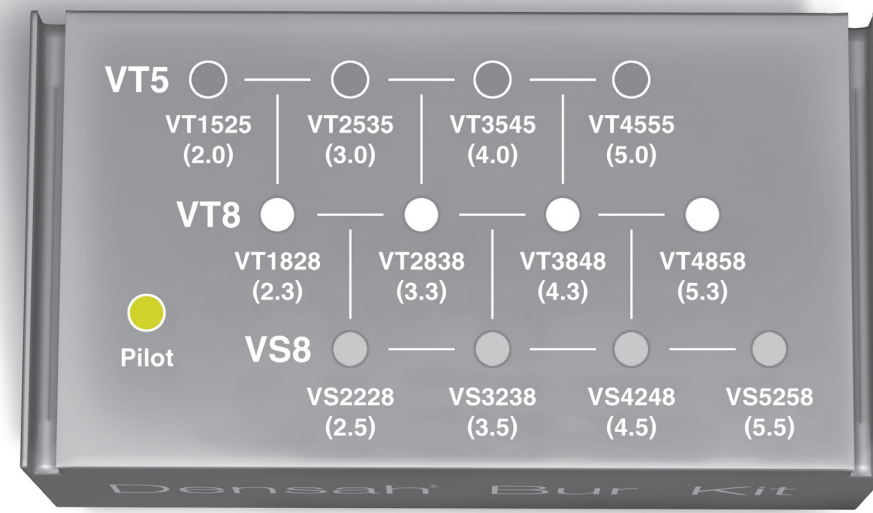

Use large block display to compare Bur identification system when using the schematic below for proper

● VT5 Set ○ VT8 Set ● VS8 Set

Densifying Mode CCW (1000) RPMs / Cutting Mode CW (1000) RPMs

Southern Implant		External Hex Straight - TriNex Straight - IT connection Straight & (Co-Axis)s																
		Soft Bone							Hard Bone (Mandible)									
		In densifying mode make sure your osteotomy is 1.0 mm deeper than the actual implant final length. extreme hard bone, utilize DAC (Densify After Cut) Protocol. Find protocol in IFU.																
Geometry	Major Ø	Minor Ø	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Densah® Bur Block Display	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Bur 5	Bur 6	Bur 7	Bur 8	Densah® Bur Block Display
Taper	3.25		Pilot	VT1828 (2.3)	VS2228* (2.5)	—	—		Pilot	VT1828 (2.3)	VS2228* (2.5)	—	—	—	—	—	—	
Taper	3.5		Pilot	VT1525 (2.0)	VS2228* (2.5)	—	—		Pilot	VT1525 (2.0)	VT1828 (2.3)	VT2535* (3.0)	—	—	—	—	—	
Taper	3.75		Pilot	VT1525 (2.0)	VT2535* (3.0)	—	—		Pilot	VT1525 (2.0)	VT1828 (2.3)	VT2535 (3.0)	VT2838* (3.3)	—	—	—	—	
Taper	4.1		Pilot	VT1828 (2.3)	VT2838* (3.3)	—	—		Pilot	VT1525 (2.0)	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VS3238* (3.5)	—	—	—	
Taper	4.3		Pilot	VT1828 (2.3)	VT2838* (3.3)	—	—		Pilot	VT1525 (2.0)	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VS3238* (3.5)	—	—	—	
Taper	5.0		Pilot	VT1525 (2.0)	VT2535 (3.0)	VT3545* (4.0)	—		Pilot	VT1525 (2.0)	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VT3545 (4.0)	VT3848* (4.3)	—	—	
Taper	6.0		Pilot	VT1828 (2.3)	VT2838 (3.3)	VT3848 (4.3)	VT4858* (5.3)		Pilot	VT1525 (2.0)	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VT3545 (4.0)	VT3848* (4.3)	VT4858 (5.3)	VS5258* (5.5)	

*Denotes implant placement.

* Clinician judgement and experience should be applied in conjunction with this suggestive Implant Drilling System


* Clinician must follow their implant systems recommended insertion torque guidelines.

For short implant placement, implant major diameter needs to be \leq the bur (average diameter) at the 8mm laser mark.

In Ridge Expansion cases, please oversize your osteotomy and make sure that the crest diameter is equal to or larger than the implant major diameter.

In Hard Bone (Mandible), after Finishing the Full Osteotomy Preparation, Use the Next Larger Size Densah Bur to the 3mm Laser-Mark Depth to make sure the Osteotomy Crestal Diameter is Equal to or Larger than the Implant Major (Crestal) Diameter.

Use Densah Burs in full-step increments for Sinus Lift cases.
Example: 2.0mm, 3.0mm, 4.0mm, 5.0mm

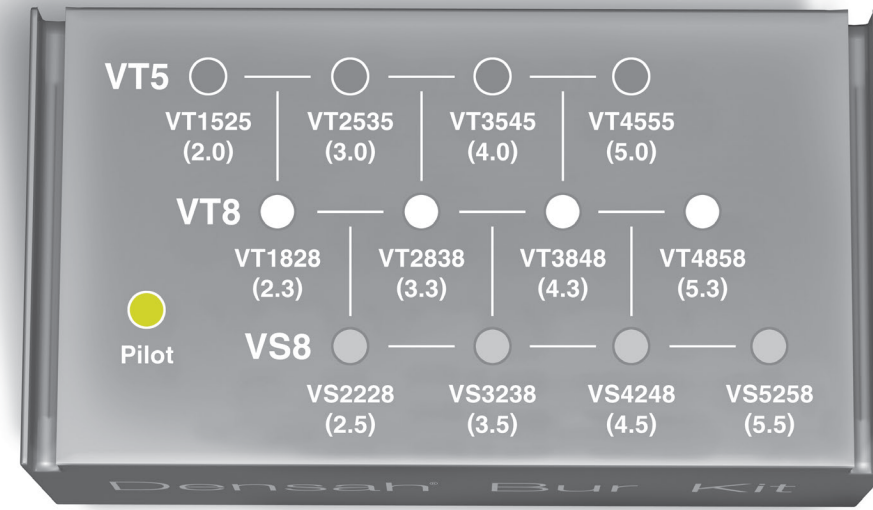

Use large block display to compare Bur identification system when using the schematic below for proper

● VT5 Set ○ VT8 Set ● VS8 Set

Densifying Mode CCW (1000) RPMs / Cutting Mode CW (1000) RPMs																		
Southern Implant			Single Platform Implant System (SPI)															
			Soft Bone						Hard Bone (Mandible)									
			In densifying mode make sure your osteotomy is 1.0 mm deeper than the actual implant final length. extreme hard bone, utilize DAC (Densify After Cut) Protocol. Find protocol in IFU.															
Geometry	Major Ø	Minor Ø	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Densah® Bur Block Display	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Bur 5	Bur 6	Bur 7	Bur 8	Densah® Bur Block Display
Taper	3.5	2.85	Pilot	VT1525 (2.0)	VT2535* (3.0)	—	—		Pilot	VT1525 (2.0)	VT1828 (2.3)	VT2535* (3.0)	—	—	—	—	—	
Taper	3.75	3.0	Pilot	VT1525 (2.0)	VT2535* (3.0)	—	—		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838* (3.3)	—	—	—	—	—	
Taper	4.0	3.0	Pilot	VT1828 (2.3)	VT2838* (3.3)	—	—		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VS3238* (3.5)	—	—	—	—	
Taper	4.6	3.2	Pilot	VT1828 (2.3)	VT2838 (3.3)	VT3848* (4.3)	—		Pilot	VT1525 (2.0)	VT2535 (3.0)	VT2838 (3.3)	VT3545 (4.0)	VT3848* (4.3)	—	—	—	
Taper	5.0	3.2	Pilot	VT1828 (2.3)	VT2838 (3.3)	VT3848* (4.3)	—		Pilot	VT1525 (2.0)	VT2535 (3.0)	VT2838 (3.3)	VT3545 (4.0)	VT3848 (4.3)	VS4248* (4.5)	—	—	
Taper	6.0	3.75	Pilot	VT1828 (2.3)	VT2838 (3.3)	VT3848 (4.3)	VT4858* (5.3)		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VT3545 (4.0)	VT3848 (4.3)	VT4555 (5.0)	VT4858 (5.3)	VS5258* (5.5)	

*Denotes implant placement.

* Clinician judgement and experience should be applied in conjunction with this suggestive Implant Drilling System

* Clinician must follow their implant systems recommended insertion torque guidelines.